

ALL NEW GAME MODES AVAILABLE!

Tournament Edition allows players to select exciting new ways to compete against each other. You can select best out of three games in player verses player mode or play the classic way, best score wins in three periods. Tournament mode allows either four players or eight players to compete to win the Super Chexx Pro Cup!

The boo buttons are used to navigate through the different screens. Tapping the boo buttons will select an option while holding the boo button down will select it. In coin-op mode, the different game modes can be charged at different rates. As the player selects the game mode, they will be prompted to insert more money if needed before they can start the game mode.

























Start player vrs players

Start tournament















How To Enter Program Mode - Home Edition

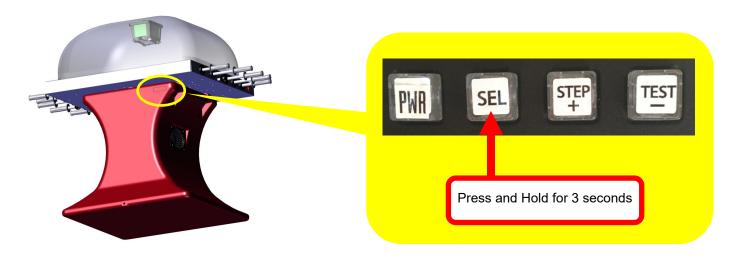

How To Enter Program Mode - Coin-op Edition

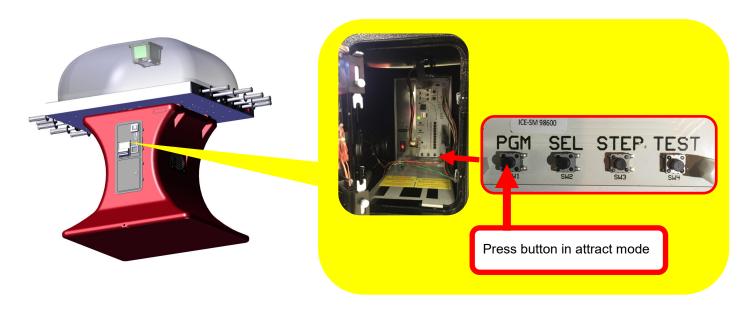



Once in program mode, the jumbo screen will show the game option and current value.

- Press the "SEL" button to go to the next option.
- Press "Step" and "TEST" to change the option value.
- Exit program mode the same way you entered the mode.

COIN OP:

Option	Min	Max	Default
Game volume	0	10	5
Attract volume	0	10	3
Cost per play (in coin 1's)	0	8	2
Coin #2 value (in coin 1's)	0	8	1
Minutes per period	1	10	2
(30 second increments)			
Last chance puck	0	1	1
Anthem select	See Table 2	Unite	ed States
Tickets per play	0 (off)	20	0
Ticket multiplier	1	2	1
Video attract interval (s)	2	30	4
(2 second increments)			
Attract audio interval	1	180	4
(1 video increments)			
Team select (Home)	See Table 1		Red
Team select (Away)	See Table 1		Blue
Underlighting color	See Table 4		0
Exchange Color	0	1	0
(swap goal video teams)			
Anthem LED colors	See Table 3		Red/Blue
(spot light color pattern)			
Goal light show	Off	On	On
Credit discount	0	20	0
Discount value	0	20	0
Anthem enable	Off	On	On
Reset defaults	0	1	0

COIN OP:

Option	Min	Max	Default
Flip Home/Visitor	0	1	1
Boo Sounds Only	0	1	0
Tournament Enable	0	1	1
Cost per 3v1	0	20	4
Cost per 4p Tournament	0	20	6
Cost per 8P Tournament	0	20	8
Team #1	See Table 1		
Team #2	See Table 1		
Team #3	See Table 1		
Team #4	See Table 1		
Team #5	See Table 1		
Team #6	See Table 1		
Team #7	See Table 1		
Team #8	See Table 1		
Reset defaults	0	1	0

HOME:

Option	Min	Max	Default
Game volume	0	10	5
Attract volume	-	10	3
	0	-	
Minutes per period	1	10	2
(30 second increments)			
Last chance puck	0	1	1
Anthem select	See Table 2		United States
Video attract interval (s)	2	30	4
(2 second increments)			
Attract audio interval	1	180	4
(1 video increments)			
Team select (Home)	See Table 1		Red
Team select (Away)	See Table 1		Blue
Underlighting color	See Table 4		0
Exchange Color	0	1	0
(swap goal video teams)			
Anthem LED colors	See Table 3		Red/Blue
(spot light color pattern)			

HOME:

Option	Min	Max	Default
Goal light show	Off	On	On
Anthem enable	Off	On	On
Flip Home/Visitor	0	1	1
Boo Sounds Only	0	1	0
Tournament Enable	0	1	1
Team #1	See Table 1		
Team #2	See Table 1		
Team #3	See Table 1		
Team #4	See Table 1		
Team #5	See Table 1		
Team #6	See Table 1		
Team #7	See Table 1		
Team #8	See Table 1		
Reset defaults	0	1	0

TABLE 1

	Team Name	
1	Red	ВОТН
2	Blue	
3	Zambonis	S
4	Checkers	C M
5	Rink Rats	L
6	Bench Warmers	O
7	Barn Burners	N
8	Hat Tricks	L
9	USA	Y
10	Canada	
11	ССР	

12	Anaheim Ducks	
12	Alianeilii Ducks	
13	Arizona Coyotes	N
14	D , D ;	11
14	Boston Bruins	Н
15	Buffalo Sabres	L
1.6	C 1 FI	
16	Calgary Flames	
17	Carolina Hurricanes	
18	Chicago Blackhawks	
19	Colorado Avalanche	
20	Columbus Blue Jackets	
21	Dallas Stars	
	Dunus Stars	
22	Detroit Red Wings	
23	Edmonton Oilers	
23	Editionion Offers	
24	Florida Panthers	
25	T A 1 TZ'	
25	Los Angeles Kings	
26	Minnesota Wild	
	1.6 1.6	
27	Montreal Canadiens	
28	Nashville Predators	

29	New Jersey Devils	
30	New York Islanders	N
31	New York Rangers	Н
32	Ottawa Senators	L
33	Philadelphia Flyers	
34	Pittsburgh Penguins	
35	San Jose Sharks	
36	St. Louis Blues	
37	Tampa Bay Lightning	
38	Toronto Maple Leafs	
39	Vancouver Canucks	
40	Vegas Golden Knights	
41	Washington Capitals	
42	Winnipeg Jets	
43	Quebec Nordiques	
44	Hartford Whalers	
45	Minnesota Northstars	

46	Not Used	ВОТН

TABLE 2

	ANTHEMS
1	UNITED STATES
2	CANADA (ENGLISH)
3	CANADA (FRENCH)
4	RUSSIA
5	UNITED KINGDOM
6	TURKEY
7	FINLAND
8	GERMANY
9	Not Used

TABLE 3

	ANTHEM LED colors
1	BLUE/GREEN
2	RED/GREEN
3	RED/BLUE
4	BLUE
5	GREEN
6	RED

TABLE 4

	Underlighting Color
1	Off
2	Red
3	Green
4	Blue
5	Light Blue
6	Yellow
7	Pink
8	Cycle all colors

Super Chexx Pro error codes

SC2134X - Main logic board (version *ML30 and newer)

The errors are displayed on this board using the green LED located at D3.

ERROR	DESCRIPTION	POSSIBLE CAUSES
LED flashes 2x, pause, repeats	SD Card not detected	No SD card inserted
		Open/shorted connection be-
		tween socket and MCU
		Damaged SD card
LED flashes 4x, pause, repeats	Number of files on SD card does	SD card missing files
	not match number reported from	Old version SD card inserted
	SD card	(1.4 and earlier)
		Fxxx file missing

SC2132X – Jumbotron LCD display (version SCLCD34 and newer)

The errors are displayed in the lower right corner of the jumbotron scoreboard screen in RED. Errors are specific to each side.

ERROR	DESCRIPTION	POSSIBLE CAUSES
1	SD Card failed to respond to the first CMD8 request	No SD card inserted Open/shorted connection between socket and MCU Damaged SD card
2	SD Card failed to respond to the ACMD41 command.	Open/shorted connection be- tween socket and MCU Damaged SD card
3	SD Card missing master boot record.	Bad SD Card sector in critical location Incorrect format (not FAT32)
4	SD Card has Less than 30 Video files.	Bad SD Card Failure during copy process.
5	Number of files on SD card does not match number reported from SD card	SD card missing files Old version SD card inserted (1.4 and earlier) Fxxx file missing